
DilutionSOLUTIONS


PKX FT/A Quick Start Guide

Flow Rate 0.26 GPH, Max. Pressure 72 PSI

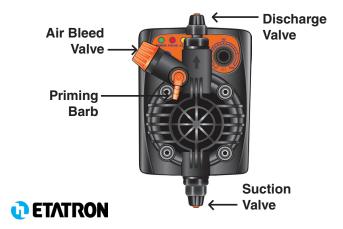

Included in the Box

- PKX FT/A Pump
- Bracket mounting kit for wall or foot mount
- Operating instructions and maintenance manual
- Pre-wired plug with blue wire
- Reducer fitting 1/2" MPT to 3/8" FPT
- Allen Wrench (to remove solenoid head if needed)
- Contact plug for priming
- Hose packet
 - Opaque, rigid PE tubing for the discharge
 - Clear, flexible, PVC suction tube
 - Injection stem
 - Foot filter

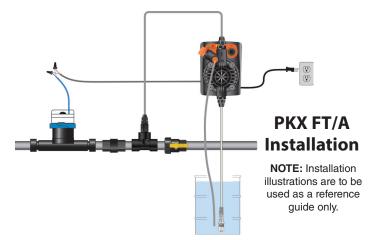

Part A: Attaching the discharge tubing to the top stem on the solenoid

Unscrew the top discharge valve nut and remove the red protective cap.



Insert the rigid opaque tubing through the nut.



Install the hose onto the discharge barb making sure the hose is seated up to the threads.



Hand tighten the discharge valve nut.



Remove the nut off of the injection stem and set aside.



Insert the injection stem into the water line as shown below. Use Teflon tape on both threaded connections.



Insert the other end of the opaque tubing through the injection stem nut, and attach the tubing to the injection valve barb, push all the way down to the threads.



Hand tighten the nut onto the top of the injection stem.



(See back for Part B and C)



Part B: Attaching the suction valve tubing

1 Cut the clear PVC flexible tubing into two pieces the correct size for your application.



Unscrew the suction valve nut and remove the red protective cap.



Insert the tubing through the nut.



Install the suction tube onto the barb, push all the way to the threads.



Then hand tighten the suction valve nut.



Attach the foot filter to the other end of the tubing using the same process and place vertically in the stock solution.



Attach the second piece of the clear PVC flexible tubing to the orange barb. Place the other end of tubing into stock solution.



The pump should be set to the "T" (time). In this mode 0 - 100% equals 0-60 seconds. In the "F" position, the pump will stroke 1 time per pulse from the Water Meter.



Part C: Putting the pump in operation

To begin, set frequency adjusting knob to 100%. Then, plug the pump in.



Unscrew the cover plate that reads EXT signal.




Insert the contact plug where it reads EXT signal it will prime for 60 secs. Remove plug.



Unscrew the air bleed valve nut, the solution will begin to go down through the priming tube. Once this has finished, re-tighten the nut.



Attach the Water Meter wires to the pre-wired plug, polarity does not matter.

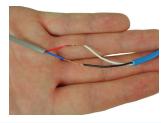

Wrap the wires with electrical tape or wire nuts (not provided).



Insert the plug where it reads EXT signal.



A CAUTION

See operating manual for complete instructions and safety standards. When connecting a metering pump either to a public water supply or to its own water source, you must respect the regulations in force concerning protection of the source i.e. backflow prevention, etc.

NOTE: Remove safety labels before installing and remember that pumps may hold water inside.

Water Meter Options		
(0000077)	WM34-1PPG	One pulse per gallon
	WM34-10PPG	One pulse per 10 gallons

NEED HELP? Call 1-800-451-6628

